Installation Instructions: New A5 Film Pocket BOARD
Part Number: 9402791P

The **new** A5 Board:

- Replaces the **old** A5 Boards, part numbers 9228590 and 9229590, because of parts that have become obsolete.
- Provides an additional connector (A5X9) for the Precise Position Sensor that is used in the *Kodak X-Omat* MULTILOADER 7000.
- Is fully compatible with the following equipment:
  Kodak X-Omat MULTILOADER 300
  Kodak X-Omat MULTILOADER 300 PLUS
  Kodak X-Omat MULTILOADER 7000
  Kodak MINILOADER 2000
  Kodak MINILOADER 2000P

A5 Board

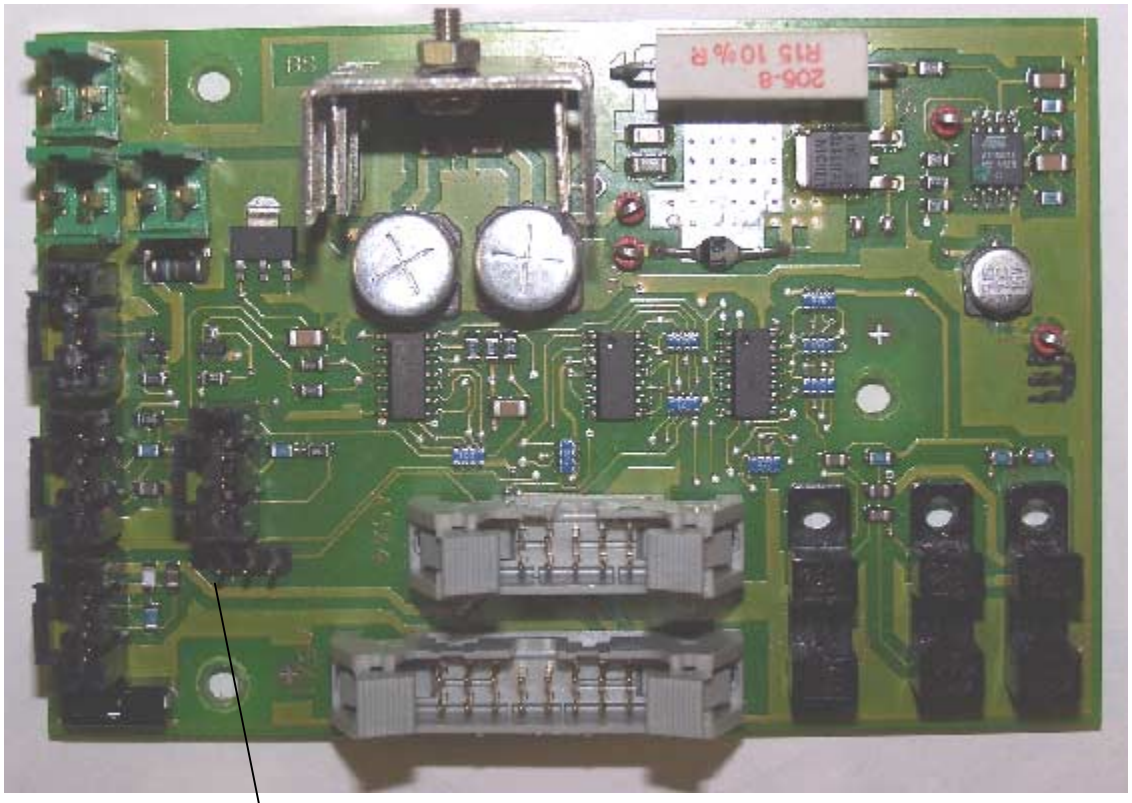

Install the new A5 BOARD as follows:

1. De-energize the equipment.
2. Remove BACK PANEL.
3. Open the FILM CHUTE.
4. Disconnect the CABLES AND CONNECTORS from existing A5 BOARD.
5. Remove the old A5 BOARD, save all hardware.
6. On the NEW A5 BOARD set JUMPER on *A5X13* as follows:

Equipment	*A5X13* Jumper
Kodak X-Omat MULTILOADER 7000	Pins 1-2
Kodak X-Omat MULTILOADER 300 and 300 PLUS	Pins 2-3
Kodak MINILOADER 2000 and 2000P	Not Used

***Note*:** Mounting of the NEW A5 BOARD is identical to the old style A5 Board

7. Install the NEW A5 BOARD using hardware from step 5.
8. Connect the CABLES AND CONNECTORS from step 4, to new A5 BOARD.
9. Close FILM CHUTE.
10. Install BACK PANEL.
11. Check for correct operation.

X1 B59, Double Sheet Detector, Setup test point
X6 VPE50 (+30Vdc) Unreg.
X8 VPE12 (+5Vdc) Reg.
X11 GNDPE
X12 VPE52 (+24Vdc) Reg.
X15 GNDPE

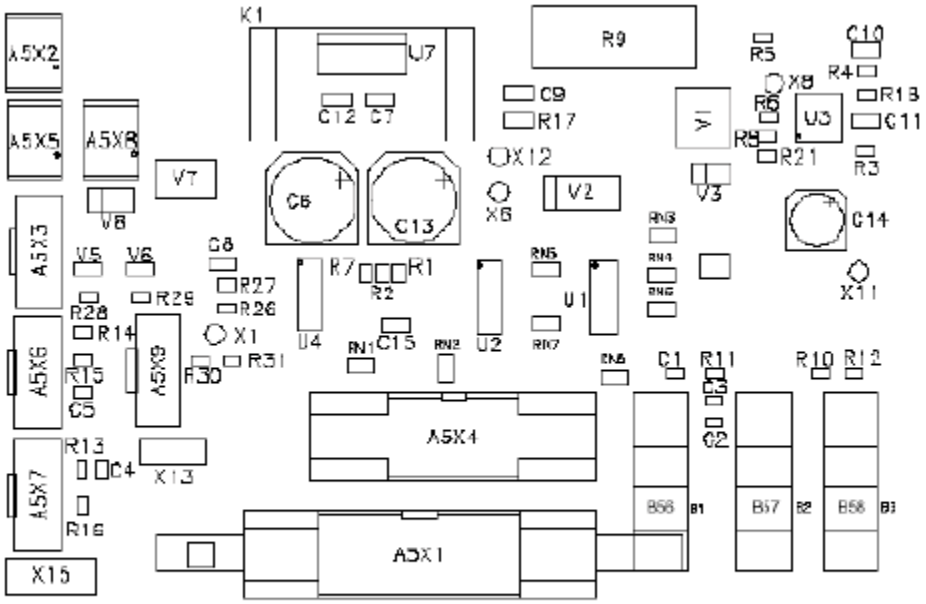

FILM POCKET BOARD A5 LAYOUT